


How to Format an SD Card – GoPro HERO10 Black

1. Hold down the Power button to turn on.




2. Open the menu on the back screen by swiping down.

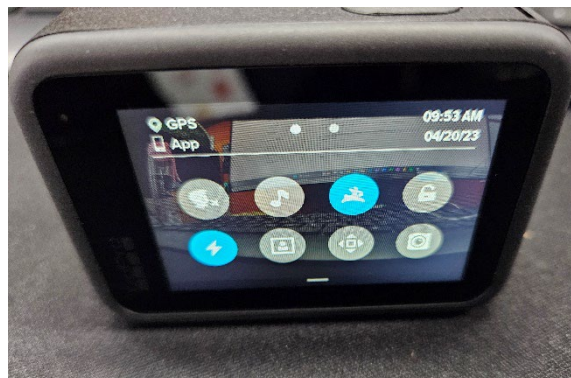



3. Swipe to the left, and open Preferences.



4. Scroll down to Reset.

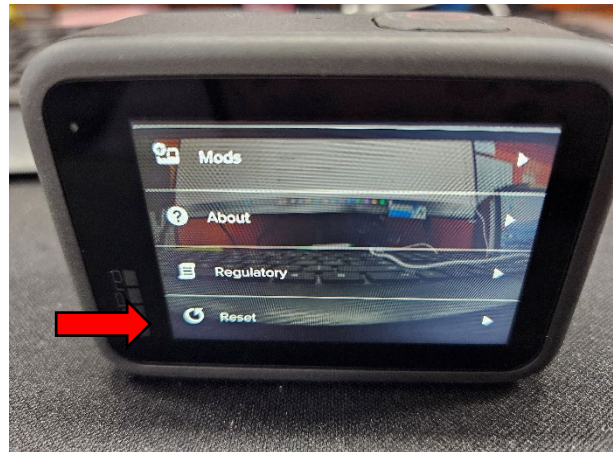

5. Choose Format SD Card.

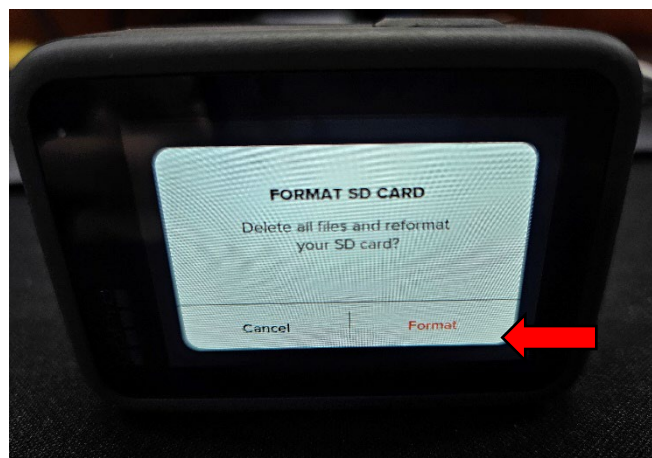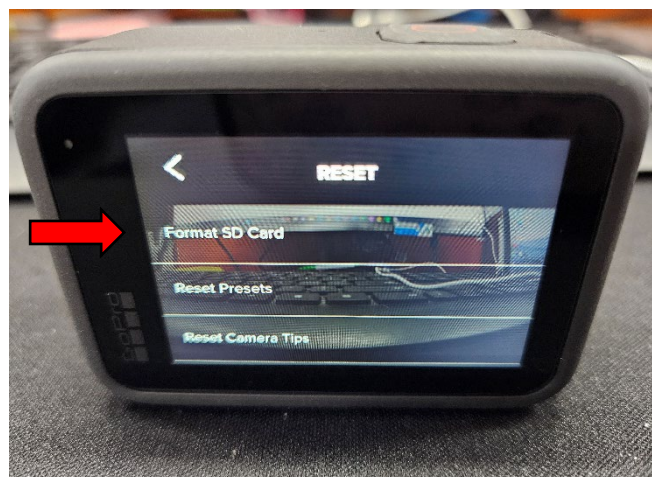

6. Once done, hold down Power button to turn off.

