

## Warning:

### ! Warning

This product contains a button/coin battery and is hazardous. Keep batteries away from children. Batteries can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. Medical attention should be sought immediately if it is suspected the battery has been swallowed or placed inside any part of the body.

## How to delete content from an SD Card on the Sony Camera:

1. Flick the power switch to 'On'
2. Click the following button to view your content



3. Click on the Trash Can button to delete the content that appears on the screen.



4. Use the outer button to highlight delete. Select delete by pressing on the central button.

